



# PETACARE Professional Pet Dryer

En Original instructions



## Security Code



### Warning

Read and obey all warnings and instructions. Failure to follow may result electric shock, burns, or serious harm.

#### 1. Operating environment security

- (A) Keep the operating environment clean and bright. Messes and darkness cause accidents.
- (B) Keep the workplace free of explosives, such as flammable liquids, flammable gas, and dust, which can damage eyes and skin during operation.
- (C) Do not use the dryer in the bath or in water and avoid touching the ground or floor, as this may lead to electric shock.
- (D) Keep children away from the operating space to avoid accidents.

#### 2. Machine security

- (A) The plug must match the socket. Do not modify the plug in any way. Doing so increases the risk of electric shock.
- (B) Avoid contacting metal or sources of heat during operation, such as pipes, sinks, and refrigerators. Contacting these increases the risk of shock.
- (C) Avoid touching the floor with the machine to reduce the risk of electric shock.
- (D) To prolong the machine's life, use the slowest wind speed and stop heating before turning the machine on or off.
- (E) In order to not be shocked or cause a short circuit, don't put sharp things into the machine.
- (F) Damaged wires should be sent to the maintenance department or professionals for replacement.
- (G) In order to not damage the machine, please don't hit or drop the machine.

#### 3. Personal security

- (A) If there is something wrong with the machine after using it for some time, please contact professionals for service.
- (B) Don't put hands into the wind inlet or wind outlet.
- (C) Don't put sharp things into the machine, as it may cause electric shock or short circuit.
- (D) Children should be supervised to ensure that they do not play with the appliance.
- (E) The appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction.



*Excellent Customer Service is a  
Supreme Value for Us!*

#### Service and customer support

We are here to serve you

Feel free to contact us with any problems or concerns, our team will be happy to give you the best service.

Head office / mailing address

2637 E Atlantic Blvd #44482

Pompano Beach, FL 33062

Contact Information

Support Email: [support@petacare-store.com](mailto:support@petacare-store.com)

Website: [www.petacare-store.com](http://www.petacare-store.com)

PETACARE offers a spare warehouse and technical service.

For your convenience, please scan the QR code..



## About PETACARE

Our pets are our best friends. Not only do they make us happy when we come home after a tiring or hard day at work, they also love us unconditionally, look after our children and play with them at every opportunity.

PETACARE was established with the understanding that there is a lack of quality and accessible products for pets in the market today. We are often forced to compromise, which shouldn't be so; hence, our determination to give you only the best. We deal in all kinds of products necessary to keep a healthy and happy pet. These range from animal foods to a large number of beneficial comfort items.

Our pets protect us and our home, they give us moments of happiness and joy and unlimited love - they are a part of our family. And our family deserves the best. Although there may be many brands and pet care shops, PETACARE stands out above all.

PETACARE is driven by the vision to provide the best products for pets, and therefore, what you get are products that have undergone careful examination and have been found to be the best quality products available.

When our customers are satisfied and return to us again and again, we believe we have achieved our goal.

PETACARE  
For the Love of Pets!

## 4. Instructions and notes

- (A) The dryer is very dangerous in that the on/off switch is difficult to reach during operation, so the unit must be controlled well and safely during operation.
- (B) Before regulating or storing the dryer or replacing accessories, unplug the machine to avoid it being turned on by accident.
- (C) Keep the idle dryer away from children's reach.
- (D) To prolong the machine's lifetime, clean the fur in the wind inlet and outlet

## Technical Parameters

Voltage: 110/240 V  
Power: 2400 W  
Frequency: 60/50 Hz  
Current: 11/20 A  
Wind Speed: 48 m/s  
3450 cfm

Temperature: 40-60 C  
Working Mode: LED display  
shows 8 levels speed  
Sheet Material: Stainless steel/  
cold panel, and ABS  
Ø Dryer Size: 160\*380 mm



Noise: 60 dB  
Insulation Level: /II  
Weght: PC-1701 - 4.8 kg  
PC-1704 - 9.5 kg  
PC-1703 - 11.3 kg  
Air Volume: 30,000 fpm/rpm

## Installation

### Unplug before installing, repairing, or replacing the windpipe.

- A. Set soft pipe: set pipe on the connector, then twist the pipe in the direction the arrow indicates.
- B. Set plastic wind pipe: choose one pipe you need, set it on the connector, then twist the pipe in the direction the arrow indicates.
- C. Set vertical support: set machine into support's long pipe.
- D. Set stainless steel windpipe: connect pipe with connector, then twist the pipe in the direction the arrow indicates.
- E. Set wall hanger support: use screw to fix support on wall, and use screw to connect support with machine. For more details, see the instructions in the support's packaging.
- F. Set portable dryer's windpipe: choose one pipe you need, then twist the pipe in the direction the arrow indicates.
- G. Set pole to turn in any direction: fix clip on the grooming table, twist the knob on the clip to attach to the pole, then attach the machine to the pole.

# Operation and Working Instructions

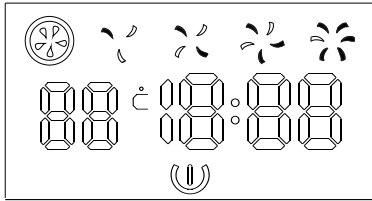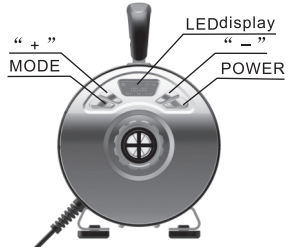

A. The “ $\cup$ ” on LED display begins to flash when you put plug into socket, press “POWER” to turn on or turn off press “MODE” to change motor mode, flashing “ $\cup$ ” will be showed on LED display. press “+” to make wind speed faster, at this time, “ $\rightarrow$ ” will be showed on LED display. Press “-” to make wind speed slower, at this time, “ $\leftarrow$ ” will be showed on LED display. Press “MODE” again, “ $\cup$ ” will be showed on LED display, press “+” to heat wind, 1-8 grades of wind temperature will be showed on LED display. Press “-” to make wind temperature lower, 8-1 grades of wind temperature will be showed on LED display.

B. “ $\cup$ ” is working time

## Functions



Read and obey the warning and notes. Failure to do so can cause electric shock, fire, or even serious injury.

### Part Names

- |                      |   |                         |
|----------------------|---|-------------------------|
| 1. handle            | 11. LED screen panel                                  | 18. rubber nozzle       |
| 2. base              | 12. host connector                                    | 19. dryer to stand post |
| 3. body              | 13. mechanical wind speed, temperature control button | connector               |
| 4. rubber feet       | 14. power button                                      | 20. stand post          |
| 5. LED screen        | 15. mechanical panel                                  | 21. joint arm           |
| 6. power button      | 16. straight pipe                                     |                         |
| 7. flexible hose     | 17. solid fixed pipe                                  |                         |
| 8. wire              |   |                         |
| 9. nozzles adapter   |   |                         |
| 10. flat wind nozzle |   |                         |

